


CALCOMMANDER SOFTWARE AND DRIVER INSTALLATION

A. First Installation (if no prior version was installed on this computer)

Minimum requirements: Windows XP or later, 2 GB RAM, 250MB hard drive space, screen resolution of 1024x768 or higher.

Step 1: If you're installing CalCommander from a Calmetrix USB Flash Drive, connect the Flash Drive to your computer's USB port and browse to the Software Installation folder.

If you downloaded the Software Installer from the Calmetrix website, first expand (unzip) the downloaded file as shown below. In the expanded folder, locate the CalCommSetUp file.

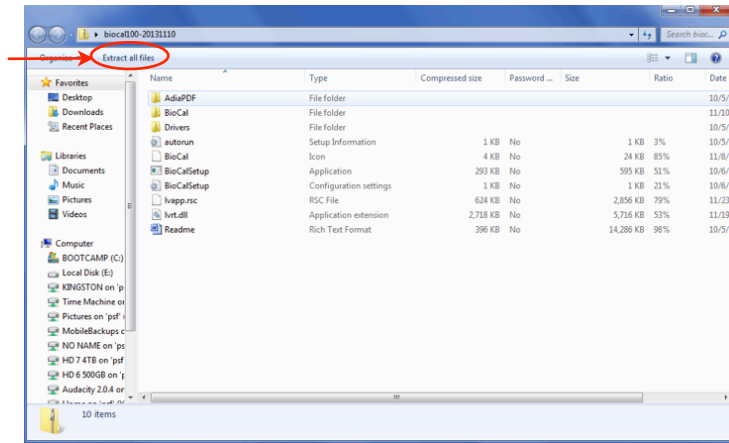


Step 2: Double-click on CalCommSetUp (gray icon) to launch the software installation assistant. The assistant will first install CalCommander and the AdiaPDF writer, and then the drivers of your I-Cal equipment. Driver installation is an important part, as your computer will not recognize the instrument without them. During installation of CalCommander and AdiaPDF, you will be prompted for acceptance of several license agreements. Follow the prompts and accept all license agreements after reading them.


Important: Do not reboot the computer until installation of all software modules is finished - when prompted to reboot, select "Reboot Later". When installation is finished, a message "CalCommander: Installation Complete" will be displayed. After that, reboot the computer, if prompted.

Step 3: After installing the main CalCommander software component, the assistant will now begin installation of the Pico (datalogger) drivers.


a. When the screen below appears, select TC-08 (USB) and check "Install for other devices"

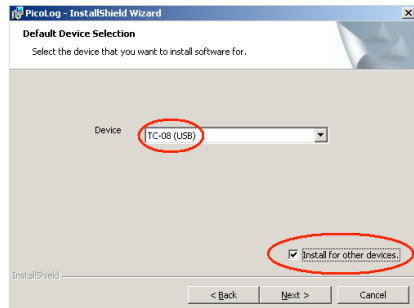


b. Then select "Custom" in the following screen, as shown below

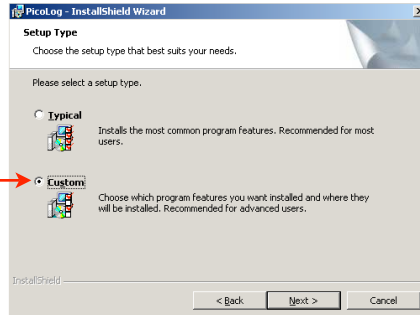

c. Then click on "PicoLog" and select "This feature will not be available"

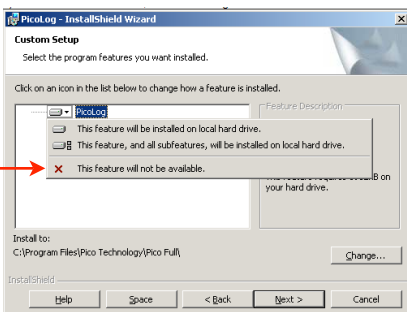


d. Click "Next" and go through the remaining steps

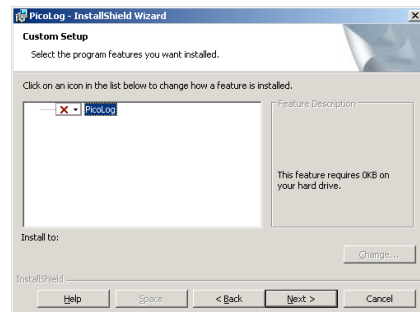


Step 4: Installation of FTDI (temperature control) drivers. The installation should start automatically. However, if you see the screen shown below, click "Run".

If you see this screen click "Run".

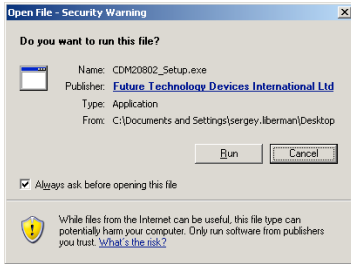

The following screen will show briefly

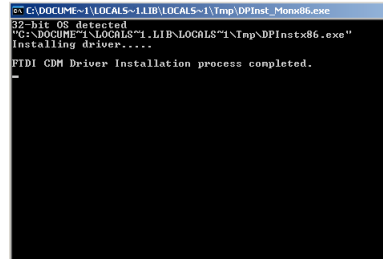

Step 5: Wait for the message "CalCommander: InstallationSuccessful" to appear and then reboot your computer if prompted.


Important: Disable all Windows Automatic Update functions and energy savers, as they may interfere with the software during your testing and cause the program to stop inadvertently.

B. Installation of upgrades (if a prior version was installed on this computer)

Step 1: If you're installing the new CalCommander version from a Calmetrix USB Flash Drive, connect the Flash Drive to your computer's USB port and browse to the Software Installation folder.

If you downloaded the new CalCommander Software Installer from the Calmetrix website, first expand (unzip) the downloaded file [see above in the First Installation section for a screenshot that shows how to expand the file you downloaded]. In the expanded folder, locate the CalCommSetUp file.

Step 2: Double-click on CalCommSetUp (gray icon) to launch the software installation assistant. You do not need to install The AdiaPDF Writer, Pico Drivers and FTDI Drivers (they were already installed with the prior version). Therefore, you can deselect these items by double clicking on the checkmark next to them so that an "x" appears as in the image below.

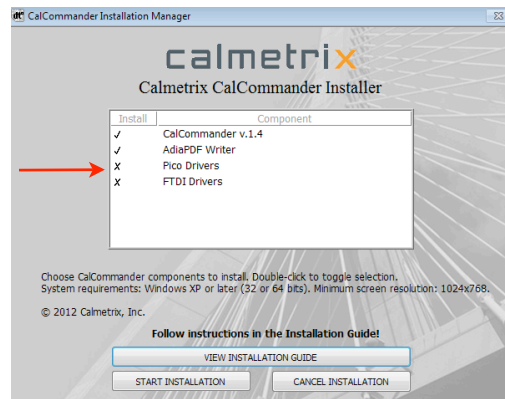

You will be prompted for acceptance of several license agreements. Follow the prompts and accept all license agreements after reading them.

Step 3: Click on "Start Installation", and follow the instructions (accept all licensing agreements). You will not need to register your software. The former registration numbers are still valid.